


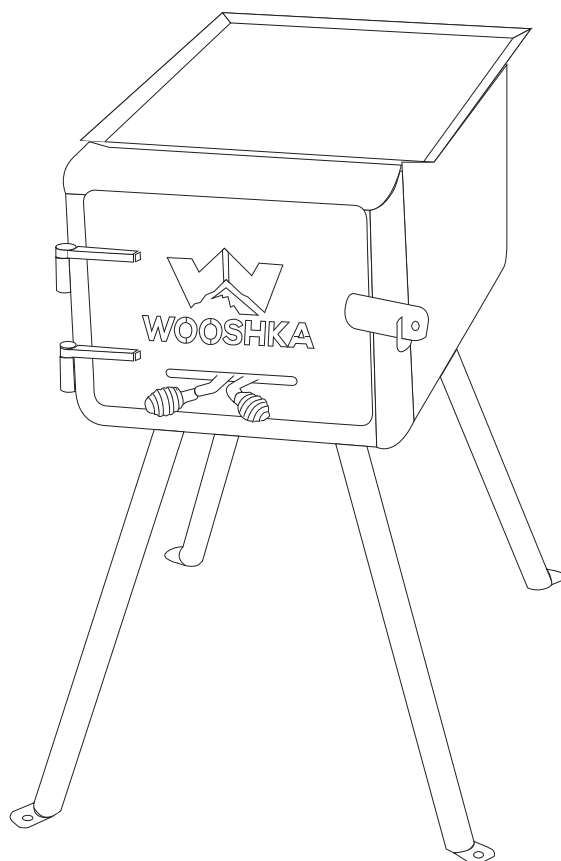

WOOSHKA

THE GO-EVERYWHERE WOOD-FIRE
STOVE AND HEATER

USER GUIDE



Wooshka

58-62 Access Way,
Carrum Downs, VIC
3201 Australia

+61 (03) 8579 5905
www.wooshka.net.au

OUTDOOR USE ONLY

CONTENTS

What's In The Bag?	1
Firebox Leg Assembly Instructions	1
Firebox Door Assembly Instructions	2
Firebox Fire Grate Instructions	2
Firebox Flue Assembly Instructions	2 & 3
Firebox Flat/Grill Plates	3
Becoming Familiar With Your Wooshka	4
Adjustable Vented door	4
Safety Tool	4
Firebox Side Brackets	4
Flat Plate	4
Grill Plate	4
Flue Assembly And Spark Arrestor	4
Fuel	5
Lighting Your Wooshka	5
Burning In Your Wooshka	5
Seasoning Your Flat And Grill Plates	6
Storage & Caring Your Wooshka	6
Warranty	7

What's In The Bag?

The Wooshka Original includes:



WOOD FIRED OUTDOOR STOVE WITH FIRE GRATE


SCCS001



FLUE WITH SPARK ARRESTOR



FLAT PLATE

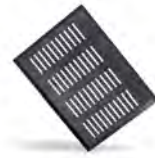

GRILL PLATE



LOCATOR PINS



TRAVEL BAG



Firebox Leg Assembly Instructions



1

To assemble the legs, place camp stove on its side.



2

Locate the legs and turn anti-clockwise to lock into place.



3

To ensure the legs are stable, insert locator pin.



It is very important to ensure the pins are used to lock the legs into place. Failure to do so could put the unit at risk of falling.



4

Turn the locator pin to lock into place, continue these steps for all four legs.

Firebox Door Assembly Instructions



To install the door, simply locate door pins into the hinges.



Firebox Fire Grate Instructions



To install the fire grate, insert diagonally into the firebox.



Ensure both sides are resting on the lip in order to have a gap below the fire.

Firebox Flue Assembly Instructions



Insert elbow bend into flue opening located behind the outdoor stove.



Rotate elbow bend clockwise to lock into place.



To ensure the flue doesn't loosen, insert locator pin.



Rotate pin clockwise to lock into place.



Connect all of the provided flue pieces. It is important that all extensions are used.



Connect the spark arrester. This reduces the risk of hot embers leaving in the flue.



Lastly, connect complete flue assembly to the elbow bend or top of flue oven depending on configuration.

Firebox Flat/Grill Plates



Insert locating tab onto side of the firebox



Flat / Grill plates can also be used over the firebox

Becoming Familiar With Your Wooshka

Over the years we have created many versatile features for your Wooshka. The following are handy tips to help you get started so you can enjoy all aspects of your Wooshka Wood Fire and Stove.

Adjustable Vented Door

During cooking, close your Wooshka adjustable vented door, the door allows you to moderate the heat output by adjusting the cool-to-touch air-slides, having the air-slides in the closed position reduces the heat output, alternatively having the air-slides in the open position increases heat output.

For heating, keep your Wooshka door open, this allows you to enjoy the heat and serenity of your Wooshka fire.

Safety Tool

This tool allows you to safely open the door during use and hangs neatly from the door latch.

Firebox Side Brackets

These clever brackets allow you to add multiple cooking accessories to your Wooshka Stove.

Flat Plate

Having the largest cooking surface in its class and combined with a German made non-stick food grade coating your flat plate is perfect for cooking up a storm, it has been designed to avoid fat spillages and direct surplus fat into the firebox.

Grill Plate

Perfect for flame-grilling meats and seasoned vegetables, your grill plate is the perfect accompaniment to your BBQ cooking and provides ample cooking and pre-heating space.

Flue Assembly And Spark Arrestor

Made from high grade stainless steel, each section conveniently slides into each other to create a high discharge point for smoke, the top spark arrestor prevents hot embers and ash from exiting the top.

Fuel

Your Wooshka is designed to burn dry wood only.

It is NOT designed to burn the following:

- Treated or painted wood
- Paper or cardboard, other than small amounts used to light the stove.
- Plastics
- Synthetic fuel or logs that are not approved for solid fuel stoves
- Household rubbish
- Liquid fuels

Burning these or other items for which Wooshka was not designed may damage the unit and cause a fire hazard or release toxic fumes. Fuel should be stored in a dry place. We do not recommend burning wet or wood with a high moisture content.

Lighting Your Wooshka

You will require: kindling; dry firewood cut to small pieces no thicker than 60mm in diameter & 300mm long; newspaper/fire starters (if required); matches/lighter.

1. Set up Wooshka on a level surface before starting the fire (tent pegs can be inserted into feet for additional support).
2. Place newspaper/fire starters in the firebox.
3. Sit kindling over the newspaper/firestarters.
4. To help the fire ignite, leave the firebox door and top open to allow air circulation.
5. Once kindling starts to burn, slowly feed firewood until you have created a coal base.
6. Once the fire is well established you can begin to add the desired accessories.

Burning In Your Wooshka

Your Wooshka firebox has a specially designed heat proof paint that hardens with use to create a durable and protective coating.

When burning in we recommend starting with a slow burn for 30 minutes then increase the fuel load to create a enough heat to reach approximately 250oC, then maintain this for a minimum of 1hr, the longer you can make this the better, for optimal results maintain this temperature for 3 hrs then allow the firebox to cool down naturally. During the burn-in it is not recommend to have the flat or gill plates attached to or on the fire box.

Seasoning Your Flat And Grill Plates

Seasoning your non-stick Wooshka cooking plates is easy, it protects the coating and maintains its non-stick performance.

How to season your Wooshka flat and grill plate:

1. Wash the surfaces with warm soapy water and dry.
2. Lightly rub vegetable or canola oil onto the flat and grill plates.
3. Using a low to medium fire, spread the coals and embers so they evenly cover the entire base of the Firebox, this will provide an even heat for the flat and grill plates.
4. Place the flat plate in position and heat up the oil for approximately 10 minutes then remove the plate and allow it to cool. Repeat this for the grill hot plate.
5. Finally, wipe any excess oil from the cooking plates using paper towel then you're ready to go.

For flat and grill plate longevity its recommend to follow this simple process every 3rd cook.

Storage And Caring For Your Wooshka

Ensure your Wooshka is cooled and cleaned before packing away for transport or storage. Ensure that all ash and coals are removed from the firebox prior to storage.

You will enjoy many years with your Wooshka by following these simple care and maintenance tips.

To prevent light surface rust, ensure that you regularly coat the outside of the firebox, flue pieces, and cooking plates with a food-grade oil.

While the unit is still warm, use a soft cloth or paper towel to rub the oil into the stove and accessories.

If left outdoors, ensure that the unit is well covered and protected from the weather.

CAUTION:

- Wooshka is strictly for outdoors use only.
- When camping, check information signs or with authorities to ensure you can light a fire.
- Do not use your Wooshka unless fully assembled.
- It is recommended to use heat proof gloves when changing cooking plates or adjusting the flue system.
- Never leave Wooshka unattended and in case of an emergency, keep a bucket of water nearby.
- Keep your children and pets away from Wooshka. You may choose to use a fire guard or a barrier to keep your children and pets at safe distance.

IMPORTANT TIPS:

- To extend the life of your Wooshka grill/flat plates, we recommend covering the surface with aluminium foil before cooking on them.
- For cooking, stick with wooden spoons or silicone spatulas. Using sharp objects like, knives or metal spatulas can scratch and damage the coating on the cooking plates.
- Regularly season the stove and cooking surfaces.

Warranty

SCANDIALIMITEDWARRANTYThis limited warranty is given by Scandia Group Pty Ltd (ACN 005 868 093) (Scandia) to the original retail purchaser (you) of the product to which this Warranty applies.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits that this Warranty provides are in addition to other rights and remedies available to you under the Australian Consumer Law. This Warranty does not limit those rights and remedies.

SCOPE OF WARRANTY-If a defect in material or workmanship appears in the following parts within the corresponding warranty period after the date of the original purchase, such as to make the product unfit for normal home use; and you comply with the requirements below regarding making a claim, then, subject to the exclusions below, we will replace or repair the relevant part or (at our option) replace the entire product with the same model.

Part	Warranty Period
Wooshka Original Wood Fire Cooker	12 Months

EXCLUSIONS - This Warranty does not apply, to the extent permitted by law, our liability under this Warranty is limited to this replacement or repair obligation:

1. Where the defect is not due to the original design or manufacture of the part (including where the product, part or accessory has been subject to accident, abuse, alteration, misuse or neglect or has been installed, inspected, operated or maintained negligently.
2. To any accessories or optional parts
3. To any surface rust which may occur in transit, storage or use

How To Make A Claim

Any Warranty Claim must be in writing to our mail address below or via our website: wooshka.net.au/warranty. It must be sent within the applicable warranty period and must state:

1. The model of the product, part or accessory
2. The place, price and date of purchase
3. Reasonable details of the defect

To obtain replacement or repair under this Warranty, the product must be returned to the original place of purchase (and collected from there once the replacement or repair is complete) at your cost. Wooshka will not be responsible for any associated freight or labour costs. Wooshka will only be responsible for transport of the product from the original place of purchase to Wooshka's premises (and back) and replacement or repair in accordance with this Warranty.

2022 Copyright - Scandia Group Pty Ltd

Wooshka
58-62 Access Way, Carrum Downs, VIC., Australia 3201
www.wooshka.net.au